




BLACKBURN



WOODWORKING TOOLS OLD & NEW

CARBIDE SCRAWL KIT (Small)

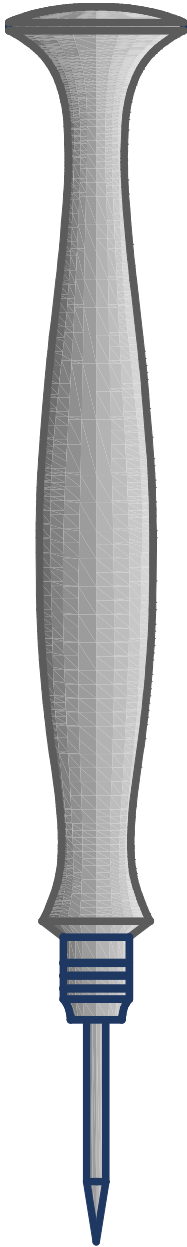

- Create your own light duty scribe/awl.
- 3/32" x 2" solid carbide shank.
- Ferrule machined from solid stainless steel or bronze.
- Ideal for marking centers or scribing virtually any wood, plastic, or metal.
- Instructions on reverse.

- Stainless steel
- Bronze

BLACKBURNTOOLS.COM

Unionville, PA 19375 ♦ 610.470.3160

Instructions & Care

1. Turn handle to desired shape. Turn the tenon for the ferrule to a diameter of 1/4". The ferrule should press on with little force.
2. Drill a 3/32" hole for the rod to a depth that gives the desired projection. A projection of one inch or less is recommended.
3. Clean the inside of the ferrule with acetone to remove any traces of oil. Apply epoxy to the interior of the ferrule and to the inside of the 3/32" hole.
4. Press the carbide rod into the handle, twisting until the rod bottoms out. Install the ferrule on the tenon, twisting to distribute the epoxy.
5. Clean up any squeezed out epoxy.



NEVER pry with your Scrawl.

NEVER strike your Scrawl, either by hand or mallet.

To prevent your Scrawl from rolling off your workbench, add a flat on the end of the handle.

To avoid damaging the tip, use light pressure when scribing metals.

If the tip ever dulls, it can be touched up with a diamond hone.

Made in USA